

IMPORTANT

If motor does not run immediately when the switch is turned on, leave switch on until the motor does turn. This may take several minutes.

This is normal. The internal gear lubricant thickens after sitting for an extended period of time.

We suggest to check the motor prior to each use to verify it turns before starting to grill.