

## Part # WH-3 • Universal Front Handle Kit (Patent Pending)

### Preparation





- 1) Measure & mark center of new handle (backside) with pencil
- 2) Measure distance between the two handle holes in the grill lid.  
(Letter "A", 14" for example)  
Divide this number by 2 to get dimension "B" (7" in the example)
- 3) Using the new handles previously marked center spot as a point of reference, take dimension "B" and mark two points to the left and right of the handles center. These will match your casting holes.

### Assembly Instruction

- 1) Position stud fastener to screw as shown
- 2) Screw the stud fastener down to the screw head.
- 3) Position screw & fastener to slot, and slide into channel until you reach the marked spots.
- 4) Hand tighten screw in place, position the (2) spacers over the screws.
- 5) Position handle to grill lid, push screws thru holes, tighten the two kee nuts with wrench.

### Parts List

- 1- Handle Wood
- 2- Spacer Handle
- 2- 10-24x3 Round Head Slotted Screw (Zinc Plated)
- 2- 10-24 Stud Fastener
- 2- 10-24 KEP Nut

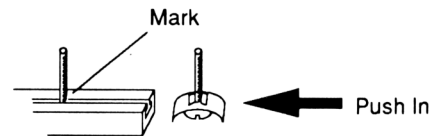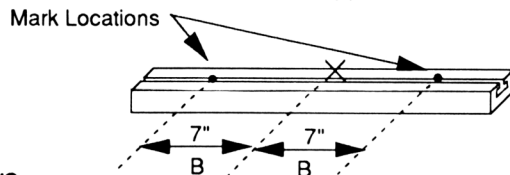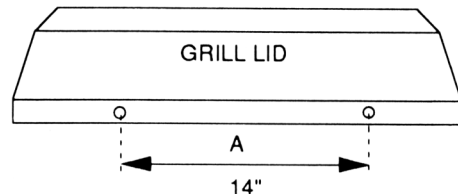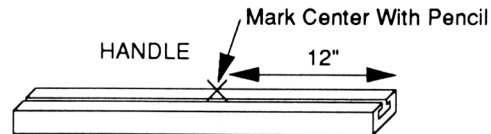

Note the position of the stud fastener.

